


**MODE N D W**

Repeated pressing of M button see top right on remote screen sets the way fire is controlled once it has been programmed in the modes below:

- N:** Normal (Manual) control
  - D:** Day. Daily automatic control as set
  - W:** Weekly automatic control. Each day as set.
- See "Set Daily or Weekly Heat Times" below.

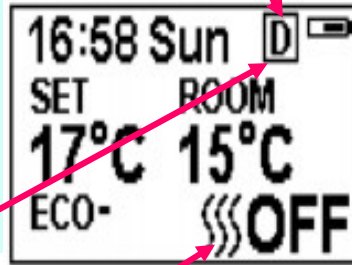

**ON / OFF**  
Turns everything on or off in Normal mode.  
If **D**aily or **W**eekly mode are set and the Temp is set as required, the heat will turn on and off automatically, subject to thermostat. The ON/OFF then just controls the flame effect

**Set Flame visual**  
Press Flame button. Then use + / - to adjust flame brightness: Off / 1 2 3 4  
And ← → to adjust flame colour: Flame off / Orange / Orange & Blue / Blue

**Count down Timer**  
(Only works in Normal Mode with Heat set ON).  
1) SET required Temp  
2) Set Heat ON  
3) Press Timer to set time from .5 of an hour to 9 hours

**Confirm Button**  
Hold down for 3 seconds to confirm a setting you have made. Or just wait 10 seconds and it will confirm automatically. Also has other select Mode setting functions

**Set the Clock Time (24 Hr)**  
Hold M button for 3 sec. Use ← → to choose setting to change. Use + / - to adjust Day, Time or Temp Press Confirm button when done.

**Set Daily / Weekly Heat Times**

Press M repeatedly till **D** or **W** in top right corner Hold Confirm Button for 6 seconds + Use ← → to choose setting to change. Use + / - to adjust Press & Hold Confirm button when done.

**Heat Set ON / OFF**

This sets the fan heater to on or off but **note:** The heater will only come on if the SET heat is higher than the actual ROOM heat. If you SET the heat to say 20C and switch the heater ON the thermostat will switch the heater on when the ROOM temperature drops to 19C

**Advance**

IF set in **D** or **W** mode, you can Advance to the next heat setting period.

**Set Coal bed visual**

Press Bed button. Then use + / - to adjust Bed brightness: Off / 1 - 4 And ← → to adjust Bed colour: Bed off / 2 & 3 Red plus lots of others

**Set Heat**

Set the required heat with the +/- buttons. Only sets above 20C in **N** mode



**Actual ROOM temp**  
Thermometer


SET required temp + / -

ECO / COMF / ++ -- Just info about how eco or comfy the SET temp is



Display info See bottom left of page

Settings selectors

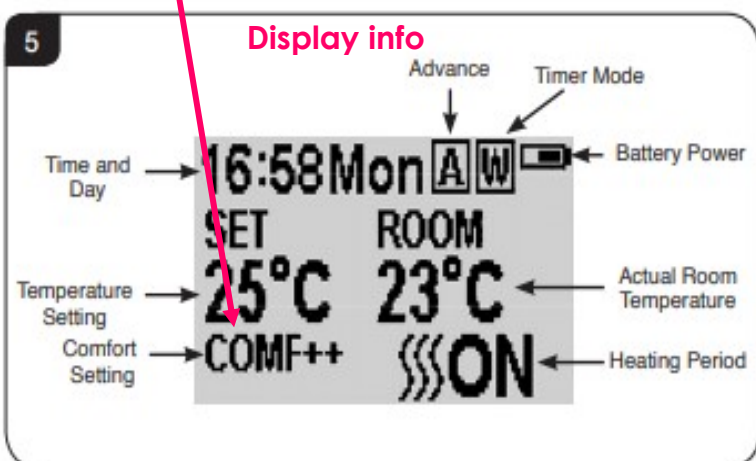

**"WINDOW OPEN" warning on display**  
If a sudden big drop in temperature is detected the heater will switch off to avoid wasting energy

